

PLATINUM



Our most comprehensive coverage, **PLATINUM** Plan expands on all of the above and includes exhaust manifold, even more heating/cooling, suspension and fuel delivery components as well as the following items.

PLATINUM COVERAGE INCLUDES:

TRANSMISSION

- Transmission linkages
- Electronic control units
- Shift interlock
- Shift lock control unit

FUEL SYSTEMS

- EGR control valve
- EGR pressure sensor
- EGR regulator assembly
- EGR valve adapter

SAFETY ITEMS

- Airbag module
- Door ajar switch
- Safety belts
- Head restraint retainers and sleeves
- Door lock cylinder
- Door lock lever
- Tailgate lock lever
- Airbag ECU
- Safety belt warning assembly
- Airbag sensors
- Airbag wiring assembly

\$5000 PER CLAIM

This brochure is only a summary of certain terms of the protection available. Please refer to the actual contract for the complete details of coverage and exclusions.

PINNACLE - TOP UP



When your vehicle still has factory coverage on the power train, however the comprehensive portion has ended, our **TOP UP** Plan steps in to cover many of those comprehensive items. This popular warranty runs side by side with the term and mileage of your factory's power train warranty.

TOP UP COVERAGE INCLUDES:

All Pinnacle coverage items except the power train items still covered by the Manufacturer.



57 Cambridge St.
Cambridge, ON N1R 3R8

CLAIMS: 1-866-320-8975



**CANADA
GENERAL
WARRANTY**

We want you to enjoy your new vehicle.

PINNACLE

No Claim Limit, No Time Limit

PLATINUM

The Ultimate Protection

TOP UP

"Best in Industry!"



For Eastern Canada.

PINNACLE

Our **PINNACLE** Plan is for drivers who want more than the essentials. This plan truly goes the extra mile, covering items like electrical braking, air conditioning, steering components and much more.

NO CLAIM LIMIT

ENGINE

Internally lubricated parts contained within the cylinder block and head(s) as listed below;

Balance shafts and balance shaft bearings • Camshaft, bearings and followers • Camshaft timing sprockets • Variable valve timing mechanism • Connecting rods and bearings • Crankshaft and main bearings • Cylinder block • Cylinder heads • Front crank shaft drive pulley • Oil pan • Oil pump • Pistons, piston rings and pins • Push rods • Rocker arms, shafts, bushings • Timing gears, guides and tensioners • Timing chain • Timing chain vibration damper • Timing chain cover • Valve covers • Valves, valve guides, lifters, springs and seats

TRANSMISSION

(Automatic, Manual and CVT)

Internally lubricated parts contained within the transmission and transfer case as listed below:

Shafts, gears, selectors, bearing, pumps • Gear shift cable • Governor assembly • Release hubs and bearings • Torque converter • Housings / cases and oil pan • Differential gear assembly • Shift solenoid valves • Automatic Transmission Fluid • Temperature sensor • Vehicle speed sensor • Park/Neutral position switch • Gear Range position sensor • Vacuum modules • Automatic Transmission Fluid Cooling Unit

SEALS AND GASKETS

As required for covered repairs

ALSO COVERING

(These are outside the block):

Flywheel / flex plate (breakage) • Flywheel ring gear • Manifold, intake • Timing chain/belt (breakage)

FOUR WHEEL DRIVE/AWD COMPONENTS

All internally lubricated parts (when damaged from within) including

Case, Gears and Sprockets • Chain mounts

TURBOCHARGER

All internal parts, including housing, waste gate controller, intercooler and hard lines (turbocharged engines MUST use turbo rated oil).

SUPERCHARGER

All internal parts including housing, compressor, clutch and pulley, bypass valve, intercooler and ducting.

ENGINE COOLING SYSTEM

Water pump • Radiator and radiator fan • Radiator fan clutch, viscous coupling or motor • Thermostat • Thermostat housing • Oil cooler • Radiator cooling fan resistor

DIFFERENTIAL (FRONT AND REAR)

Internally lubricated components contained within the drive axle as listed below:

Drive shafts • Constant velocity joints (unless damage caused by torn drive boots) • Oil pan and axle drive housing • Wheel Bearings • Universal joints • Couplings • Locking hubs

FRONT AND REAR SUSPENSION

Ball / swivel joints, upper and lower • Control arms, upper and lower • Control arm shafts • Linkage • Spindle and spindle supports • Springs (front and rear) • Stabilizer bar • Tie rods

FUEL INJECTION AND EMISSIONS MANAGEMENT SYSTEMS

Components within the fuel and emissions management system as listed below:

Mechanical and electrical fuel pump(s) • Lift pump • Fuel tank sender unit • Air control valve • Mass air flow sensor • Air idle control valve • Air supply valve and tube • Barometric / MAP pressure sensor • ECC (Electronic climate control) relay assembly • Lambda (oxygen) sensor • EVAP vapour storage canister • Knock sensor • Positive crankcase ventilation system (excluding hoses) • Temperature sensor, engine coolant • Vacuum restrictor • Throttle body and throttle position sensor • Fuel accumulator and pressure regulator • Engine cooling temperature sensor • Accelerator pedal position sensor • Camshaft position sensor • Pollution sensor

MANUAL CLUTCH

Clutch master cylinder • Clutch slave cylinder • Clutch throw-out bearing

STEERING

Idler arm • Linkages and couplings • Power steering reservoir • Pulley assembly, power steering pump • Steering rack and pinion housing • Manual and power (includes all internal parts, excluding gaiters) • Steering box • Power steering – electric assisted sensor and motor

ELECTRICAL

Alternator and regulator pack • Starter motor • Starter motor solenoid • Coil, ignition • Distributor assembly and shaft • Distributor cap and rotor • Ignition module, electronic • Switches, manually operated electrical • Windscreen wiper and washer motors (front and rear) • Horn and multifunction stalk switch • All electronic control units ECU's (Factory fitted)

BRAKES

Anti-lock brake module, pump and sensors (ABS – Factory fitted) • Backing plates • Power brake booster • Callipers and seals • Combination valve • Lines and fittings • Master cylinder • Parking brake linkage and cables • Retainers and clips • Self adjusters • Shaft, brake pedal • Park brake return springs • Wheel cylinders

AIR CONDITIONING* AND HEATING

***Factory fitted only**

A/C compressor and seals • A/C compressor / clutch switch • A/C clutch • A/C clutch bearings • Automatic temperature control • Condenser • Evaporator • Heater blower motor • Heater control cables • Heater core assembly • Instrument panel registers and air vents • Pulley(s) • A/C Pressure sensor • Evaporator Temperature sensor • Blower Resistor

AUDIO – IN CAR ENTERTAINMENT

(Factory fitted)

Antenna, radio (base assembly) • Brackets, cables and wiring • Controls • Head unit audio player / visual equipment / navigation • Amplifier

HIGH-TECH

Keyless entry / central locking system (excluding door handles) • Power door locks and retainer clips (excluding door handles) • Power window and sunroof motors / regulators / switches • Navigation

TOWING

24/7 Towing available at no up front cost to you.

SUBSTITUTE TRANSPORTATION

Rental available for major repairs (see contract).

EMERGENCY ROADSIDE ASSISTANCE

ALL of Canada General Protection Plans include Emergency Roadside Assistance and Towing, along with: lockout service, tire change, battery boost, cold weather starting, and delivery of fuel! There is no ideal time for a breakdown and we want to make it as easy as it can be on you.

OPTIONAL COVERAGE


• POWER TECH

Power sliding door and taildoor motors and switches • Bluetooth transmitters and receivers • Park sensors, backup camera • Blend-door motors

• ZERO DEDUCTIBLE

• 60 MONTHS ROADSIDE & THEFT PROTECTION

Covers up to \$4,000 in the event your vehicle is stolen and unrecovered

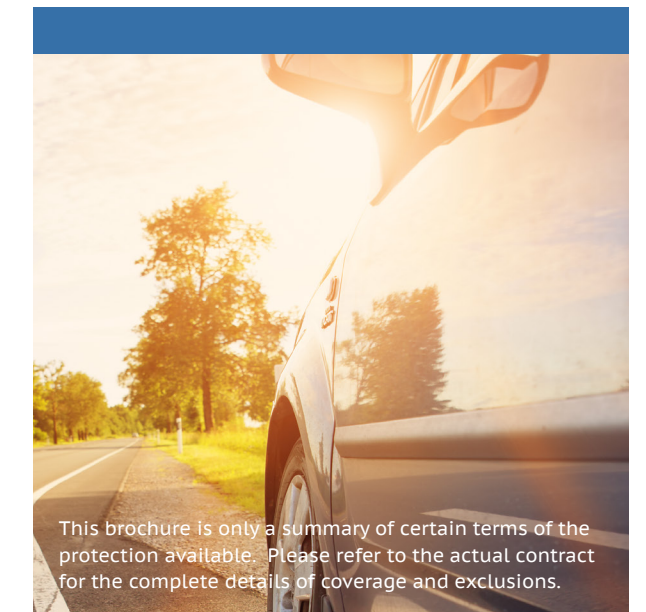

This brochure is only a summary of certain terms of the protection available. Please refer to the actual contract for the complete details of coverage and exclusions.